


GLUE THE TEMPLATE IN A LEVEL POSITION



DRILL HOLES THROUGH IN ALL FOUR CORNERS

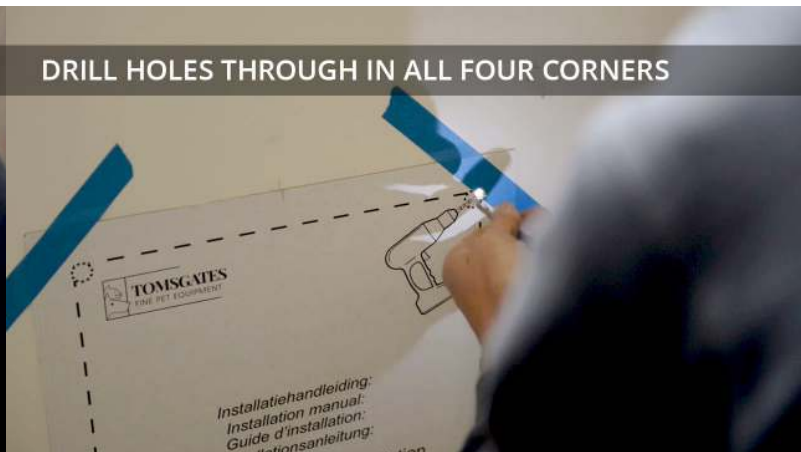

DRILL HOLES THROUGH IN ALL FOUR CORNERS




SAW OUT ALONG THE DOTTED LINE




REMOVE BACKING FROM SELF-ADHESIVE STRIP



GLUE DOOR WITH SELF-ADHESIVE STRIP

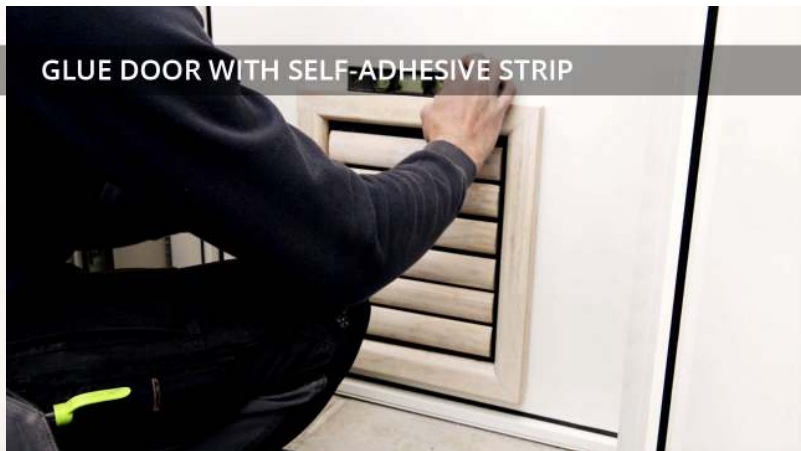

SLIP ON INTERIOR FRAME

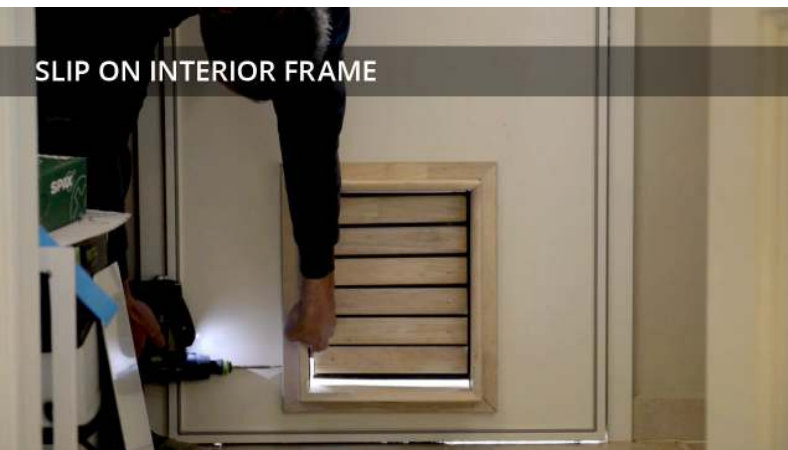

SCREW DOWN INTERIOR FRAME

